

# HOTEL SUPPLIES

YirouFang Textile Manufacture Co.,Ltd.



Visit Factory

360° VR panoramas we provide



2018-8-15

---

<http://www.yrftextile.com>

Email: [info@yrftextile.com](mailto:info@yrftextile.com)



# High Quality Imitation Llinen Fabric

Clear texture, mould proof, breathable and environmentally friendly



## Breathability and Ventilation

Double layer fabric, free adjustment of light



## 3 Different Effects

Free adjustment of light



See Through



Half Shade



Full Shade

# Two Different System

White Dust Cover/Fabric Color Dust Cover



A Style: White Dustproof Cover



B Style: Fabric color Dust Cover



Living Room



Study






BedRoom

**DESIGN** IDEA  
[More Details]



## More Process Highlight Quality

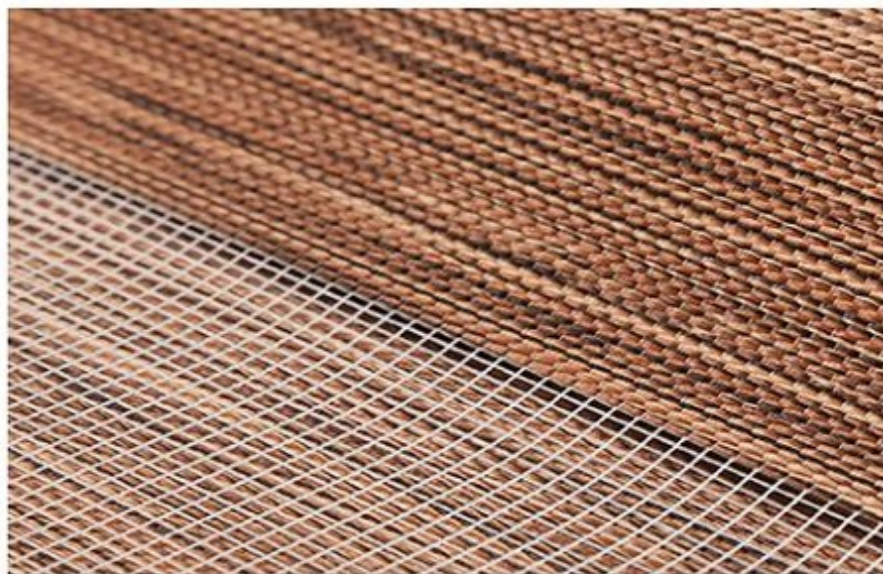

■ Fine workmanship

POM Bead Rope ■

wear-resisting ball chain





## Plum Blossom Bottom Bar

Heavy duty rod make  
the fabric is vertical always

## Multicolor Optional

A variety of colors suitable for different decoration style




**COLOUR.**

# Measure & Installation

## Accessories

Packing parts

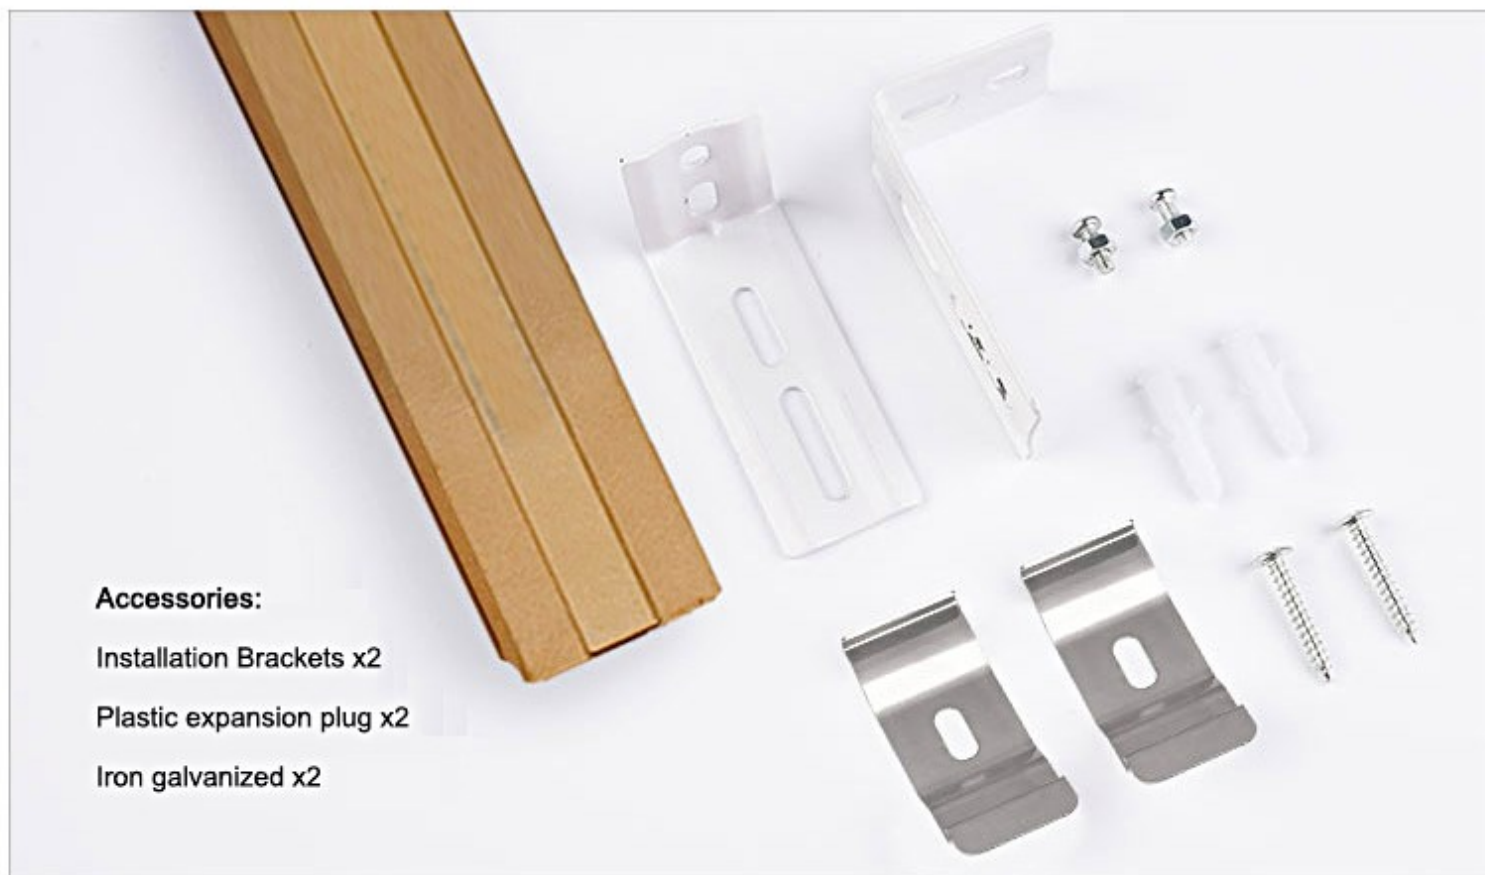

### Accessories:

Installation Brackets x2

Plastic expansion plug x2

Iron galvanized x2

# Measurement

Measure install

## - Measurement and Installation Method -

METHOD OF MEASURING INSTALLATION

**01.** Outside mount / Inside mount

Please confirm the installation method before measurement



^ - Outside Mount -



^ - Inside Mount -



Inside Open

Outside Mount Only



Outside Open


Inside or Outside Mount



Side Open

Inside or Outside Mount

**02.** How to Measure ● ● ●

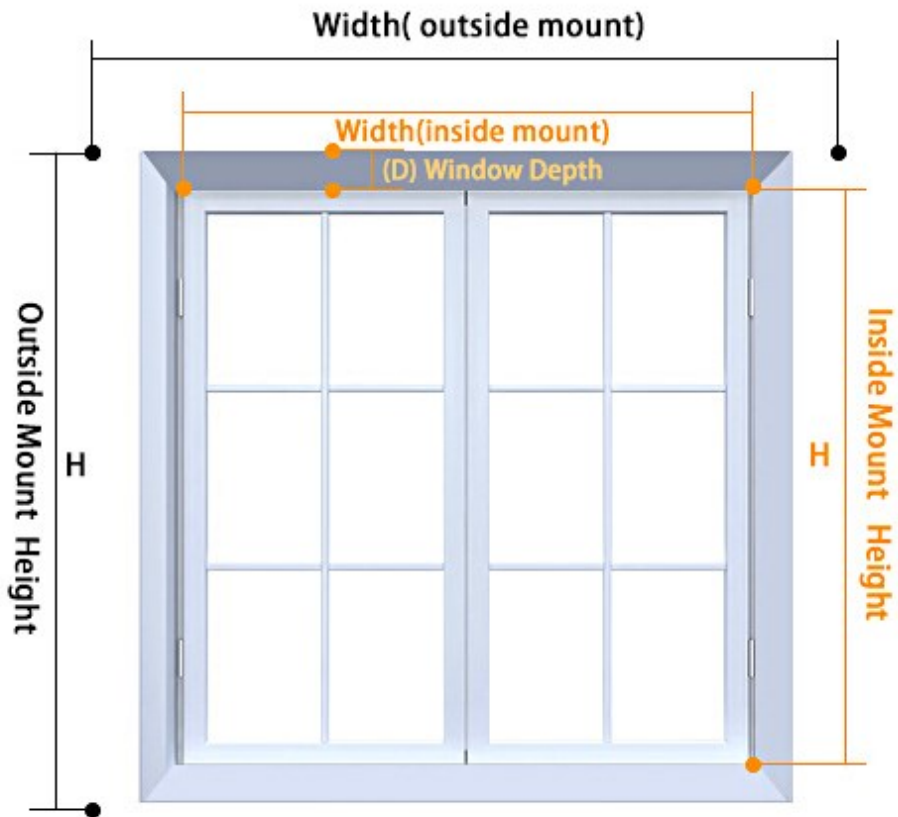

Tips: window depth (D) at least 6cm

— Customized Size:

Width Range 20~180cm

Max Height 180cm

— Outside Mount:

Roller blinds width=window width+20cm

Roller Blinds height=window height+20cm

— Inside Mount:

Roller blinds width=window width-1 cm


Roller Blinds height=window height



Please be note: Roller blinds width=Fabric width+3cm  
The width of the curtain is include the brackets width



### 03. Installation Ways

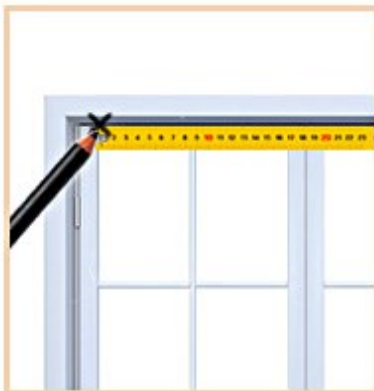

**01.** Measure the installation position, mark on the wall



**02.** Drilling on the wall



**03.** Plug the expansion screw into holes



**04.** Fix the installation code on the switch head



**05.** Fix the installation code on the wall



**06.** Fix inside end first and then lift the outside end to hold it



**07.** Hear a clicking sound, installation is successful



**08.** Installation Success



A style: White Cover

B style: cover and fabric are in same color



**Thicken Imitation Linen Fabric**  
Environmental protection natural color



E604



E606

**YRF**  
YRFTEXTILE.COM



**YRF**  
YRFTEXTILE.COM



**YRF**  
YRFTEXTILE.COM









